





THREADED SINGLE-HEAD SHADES


METHOD:NO-DRILL INTERIO INSTALLATION

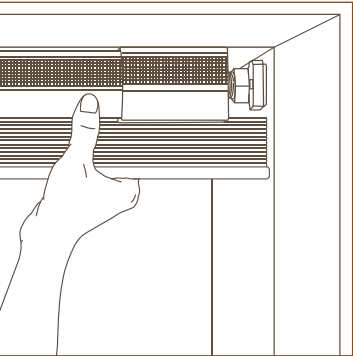


1 Push the shades into the upper right corner And squeeze the spring-loaded head firmly

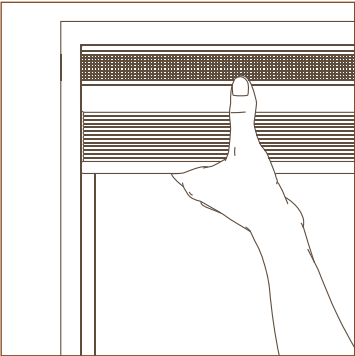


2 Then push the shades into the other side

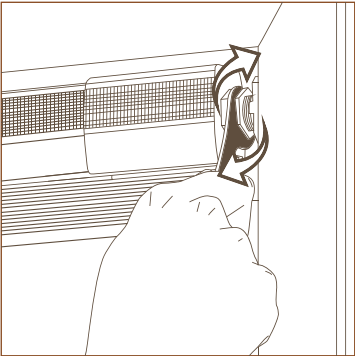

3 Tighten threads counterclockwise

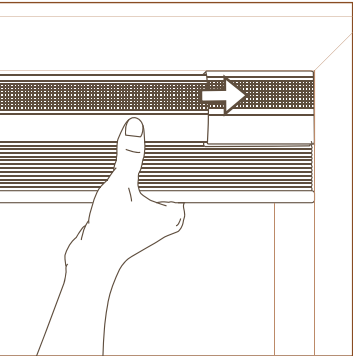


4 Slide the end cap into place to the right

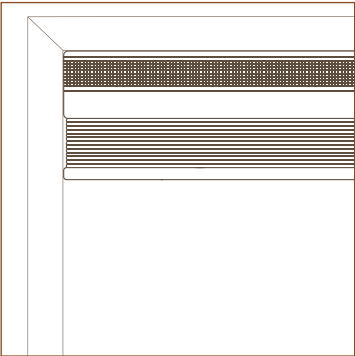


5 finish the installation

TIPS 1:
Test the blinds while twisting to make sure they are secure

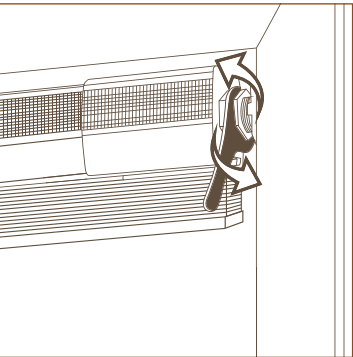

A TURN CLOCKWISE

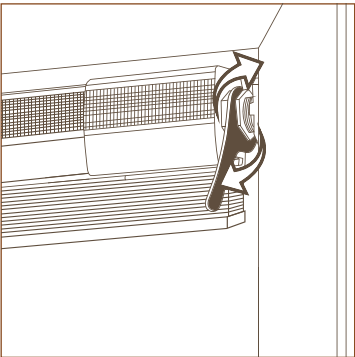

B COUNTERCLOCKWISE

TIPS 2:
A. Turn clockwise to loosen
B.Counter-clockwise to tighten

LIST OF ACCESSORIES

Wrench

Handle

Shades

Get the full how-to video on Youtube