





ROBOTIC ARM MODEL SHADES


METHOD:INSIDE MOUNT

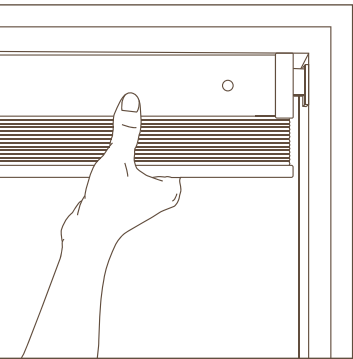


1 Push the shades into the upper right corner And squeeze the spring-loaded head firmly

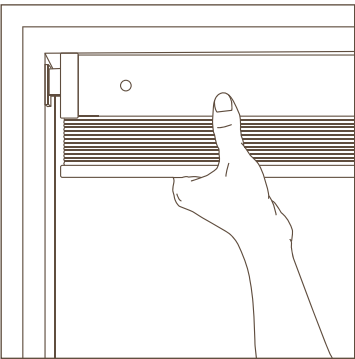


2 Push the shades into the upper left corner And squeeze the spring-loaded head firmly

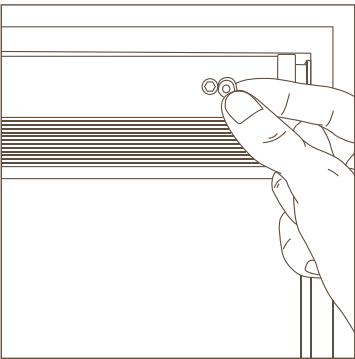

3 Remove the left and right sides dust plug from the product

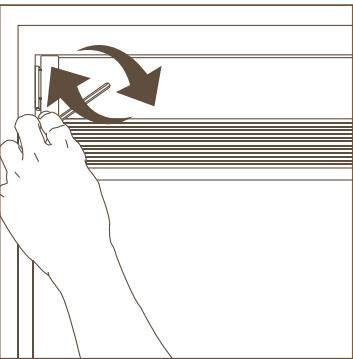


4 Left side: Tighten clockwise

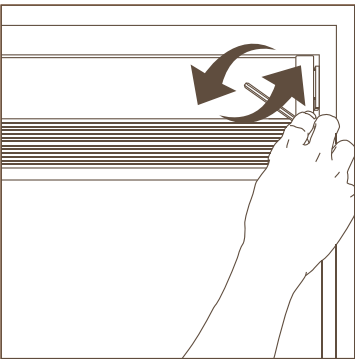


5 Right side: Tighten counterclockwise

TIPS 1:
The rotation directions on the left and right sides are opposite
When you hear a click,the screwing is complete

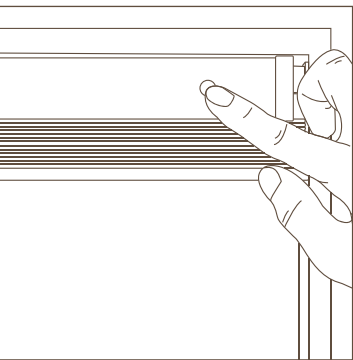

6 Put the left and right sides dustplug back on the product in its original position

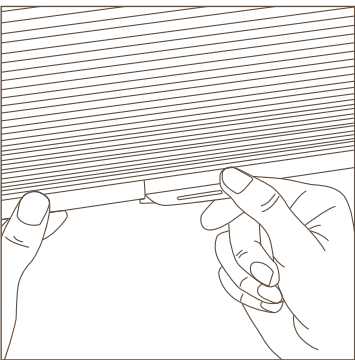

7 Pull down the shades and install the handle to thebottom rail to complete the installation

LIST OF ACCESSORIES

Hexagonal Screwdriver

Handle

Shades

Get the full how-to video on Youtube