





NO DRILL WOODEN ROMAN SHADE


METHOD INSIDE MOUNT

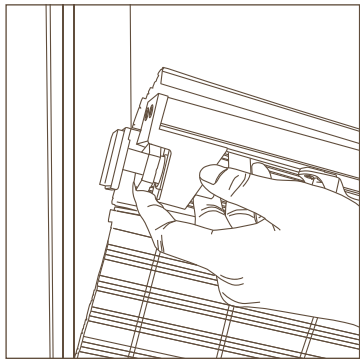


❶ Turn the nut counter-clockwise

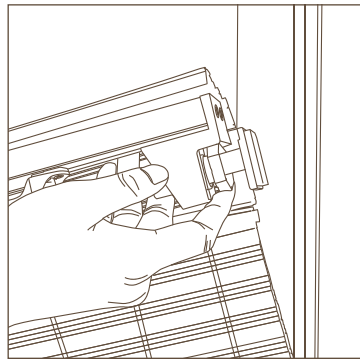


❷ Turn the nut clockwise

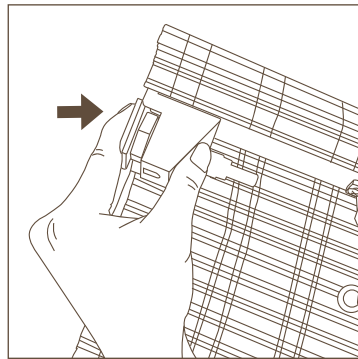


❸ Ensure the left side can be pressed all the way in

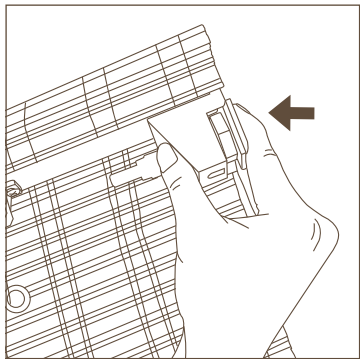


❹ Ensure the right side can be pressed all the way in

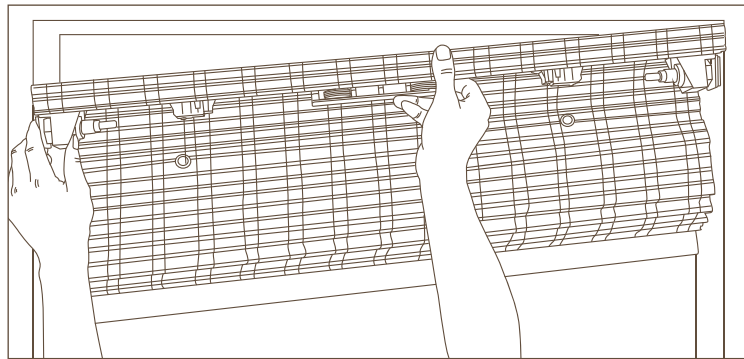

❺ Press the spring-loaded head, then install the Roman shade onto the window

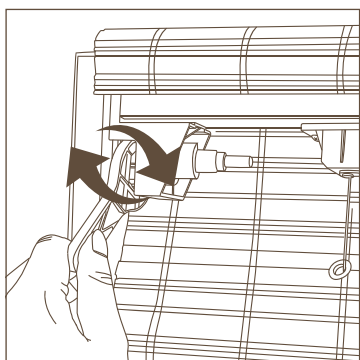

● LEFT SIDE: TIGHTEN CLOCKWISE

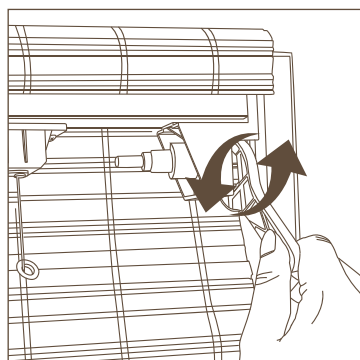


● RIGHT SIDE: TIGHTEN COUNTERCLOCKWISE

TIPS :

The rotation directions on the left and right sides are opposite

LIST OF ACCESSORIES

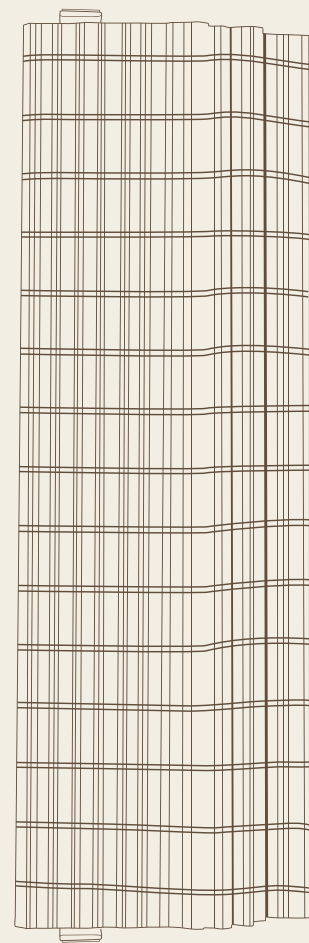

Shades



Wrench



Get the full how-to video on Youtube