





WOODEN ROMAN SHADE (DRILL REQUIRED)


METHOD1:INSIDE MOUNT

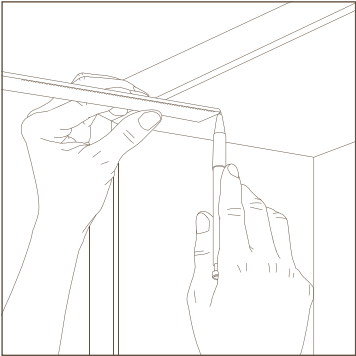

1 Measurement of suitable position

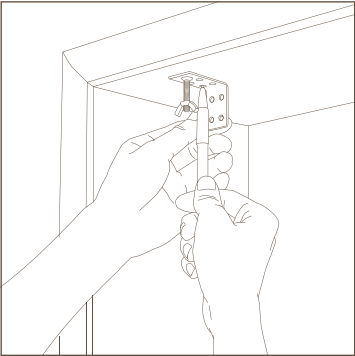


2 Mark mounting code punch locations

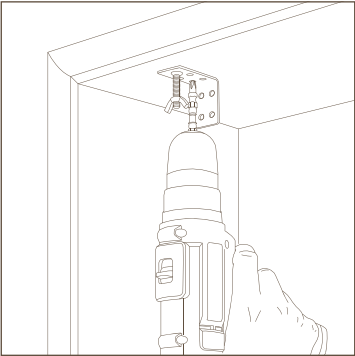


3 Secure the mounting bracket to the wall with four screws


METHOD2:OUTSIDE MOUNT

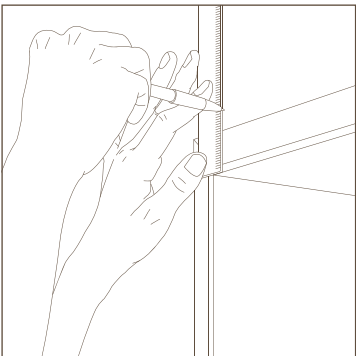

1 Measurement of suitable position

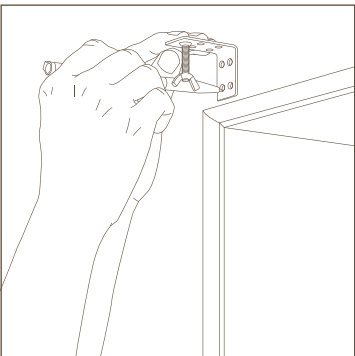


2 Mark mounting code punch locations

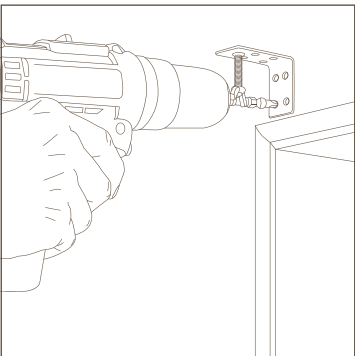


3 Secure the mounting bracket to the wall with four screws


MOUNT THE BLIND

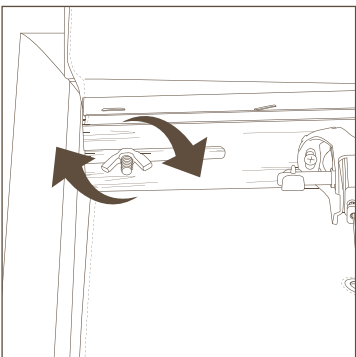

1 Loosen the nuts,install the notches of the blinds into the screws,and tighten the nuts

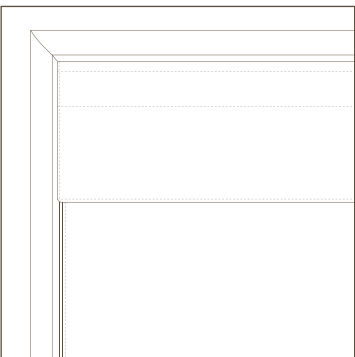


2 Check for stability

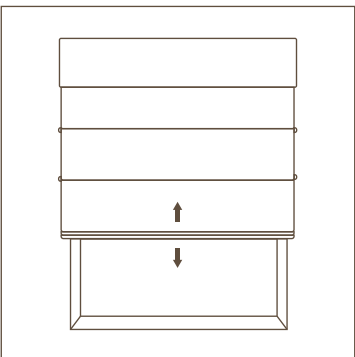


3 Finished

LIST OF ACCESSORIES

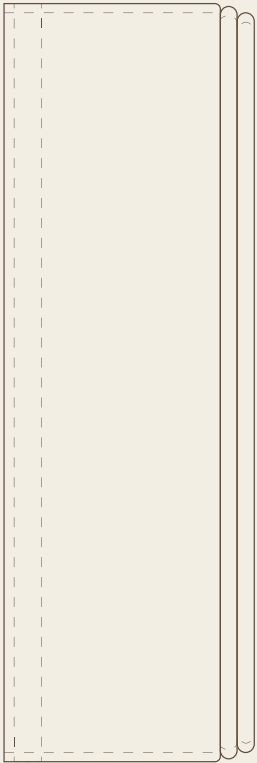

Shades



Brackets



Screws



Get the full how-to video on Youtube