



DRILL-FREE INSTALLATION SHADES


METHOD INSIDE MOUNT

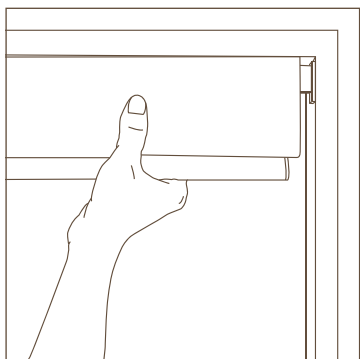


- ❶ Push the shades into the upper right corner And squeeze the spring-loaded head firmly

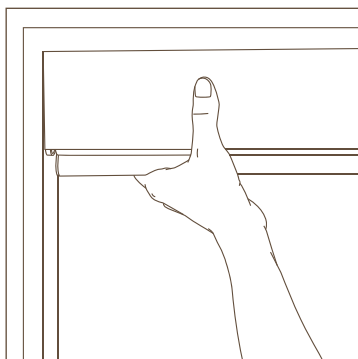


- ❷ Then push the shades into the other side

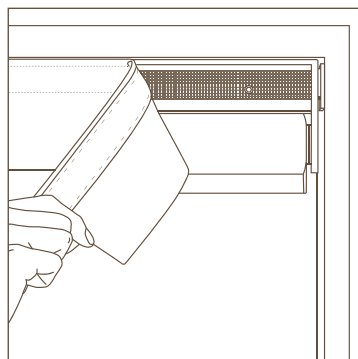

- ❸ Tear down the roller shades valance

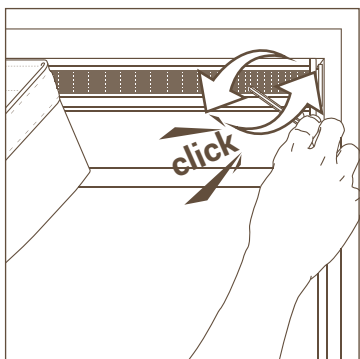


- ❹ Turn the safety lock-counterclockwise to tighten until you hear a click

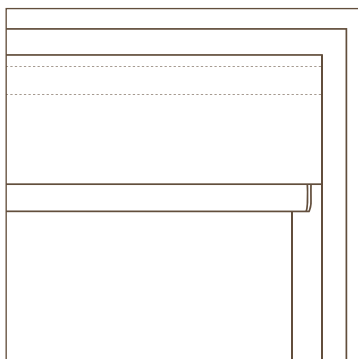


- ❺ Re-paste the valance and finish the installation

TIPS 2:

When you hear a click, the screwing is complete

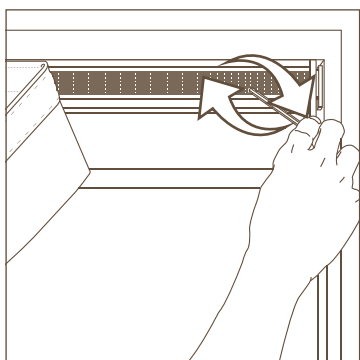

- ❶ TURN CLOCKWISE

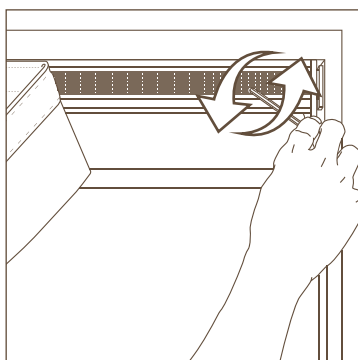

- ❷ COUNTERCLOCKWISE

TIPS 2:

- A. Turn clockwise to loosen
B. Counterclockwise to tighten

LIST OF ACCESSORIES



Shades



Hexagonal Screwdriver



Handle



Get the full how-to video on Youtube